


Unipro Oy Ltd.

Konetie 25 FI-90620 Oulu +358 207 450 800 www.unipro.fi

A75 ADAPTER INSTALLATION INSTRUCTION

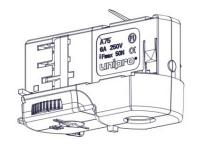

Rated Value 6A, 250V Protection Class I, IP20 Pull strength 50 N

ATTENTION!

unipro[®] adapter must not be used with any type of solvent, adhesives, greases, oils, cleaning chemicals, etc.

A70 / A75 adapters are for connection of spotlights to unipro[®] and other suitable 3-phase tracks. Compatible nipples for the adapter are unipro[®] ALN10R8 ja ALN10R12




unipro[®] products are manufactured from recyclable materials. For more information about recycling, please contact your local municipal waste management authority.


Installation instructions for unipro[®] A75 adapter

1. Press conductors to connectors using unipro $^{\ensuremath{\scriptsize \text{\tiny B}}}$ T1L -tool

Conductors must be pressed to bottom of slot in the connector to ensure reliable contact Conductor size 0,5 - 1,0 $\rm mm^2$

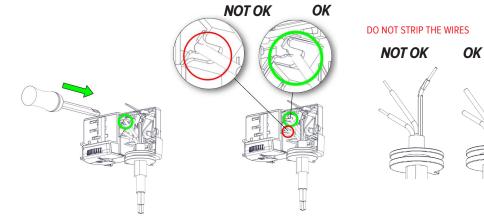

2. Check that conductors are properly installed and assemble lid by pressing it to adapter body Lid cannot be removed after assembly

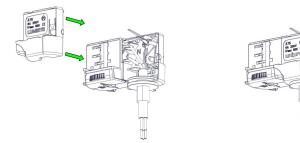

3. Installing unipro[®] L70 locker

-Remove the locker hole cover from the lid and adapter body -Place the locker to its position in the adapter body -Carefully press the lid to adapter body







unipro[®] A75 adapter installation to 3-circuit track

1. Check that adapter orientation is correct


Rib in the adapter is on the same side as groove in the track

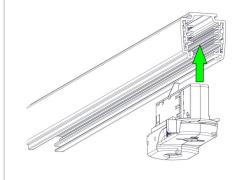

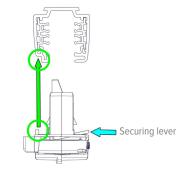

2. Press adapter against track

Check that securing lever is fully pressed against track Rib in the adapter is in groove of the track

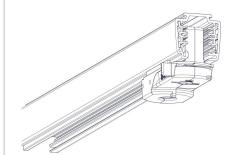



3. Turn locking lever to lock adapter to track

Locking lever is parallel to track when adapter is locked DO NOT PRESS LOCKING LEVER UPWARDS DURING TURNING

